

Watch-It

Wrist Watch Pager

User Guide

1. Basic Pager Functions

1.1 Control Buttons

 Read Button (Green)
Used to read messages and to exit menus.

 Up and Down Arrows
Used to navigate up and down, or left and right through functions and messages.

 Function Button (Red)
Used to display the Menu and to activate selections.

1.2 Turning your pager on

Press the Green button for about 7 seconds, then release when the display appears. The display will go blank or return to 'Wrist Watch Mode' after a period of time. This is normal and is designed to save battery life.

Note: Pressing any button will bring up the standby display.

1.3 Turning your pager off

- (1) Press the Red button twice (only once if the display is already active).
- (2) Press the Up arrow to display "Turn Pager Off".
- (3) Press the Red button twice.

1.4 Turning on the backlight

Press any button for 3 seconds. If the backlight stays on, repeat to turn the light off.

2. Functions and Settings

2.1 Using the Function Menu.

The Function Menu provides access to the many features of your pager through the use of symbols and prompts.

- (1) Press the Red button once or twice to display the Function Menu. The  symbol flashes to indicate the position of the cursor.
- (2) Press the up or down arrow to move the cursor within the Function Menu. As you move through the Function Menu, the pager function symbols flash to indicate the location of the cursor. To select a function press the Red button. To exit from the Function Menu without making a selection, press the Green button.

Note: Some symbols may not display on your pager depending on your pager's features and whether it has any messages.

2.2 Setting the Zoom Level

Your pager has three zoom levels which are in effect ONLY while reading messages. Zoom 1 is the smallest characters but displays more text on the screen, Zoom 3 is the largest.

- (1) From the Standby screen press the Red button.

2.2 Setting the Zoom Level (continued)

- (2) Press the Up or Down Arrow button until "Zoom 1, 2 or 3" is displayed on the screen.
- (3) Press the Red button to select that zoom level. To select another zoom level, repeat the process from step 1.

2.3 Setting the Time & Date and/or Alarm

- (1) From the Standby screen press the Red button.
- (2) Press the Up or Down Arrow button until "Set Time and Alarm" is displayed on the screen.
- (3) Press the Red button. "Set Time" is displayed.
- (3) The top line is the time, the bottom line is the alarm, and a black dot is flashing on both sides of the time. If you want to set the alarm, press the Red button so that the flashing dots are on the bottom line. "Set Alarm" is displayed.
- (4) Use the Up and Down Arrow buttons to move the cursor left or right, press the Red button repeatedly to increase the number value.
- (5) When "24 hr" is flashing (this is military time), press the Red button to select AM or PM if desired.

Notes: When setting the alarm press the Red button while the bell is flashing to enable or disable the alarm. A horizontal line through the Bell indicates the Alarm is off.

To set a daily alarm do not enter a date, leave all hyphens.

To set a one-time alarm, enter the date.

- (6) Press the Green button when finished.

2.4 Setting the Message Alert Mode

There are four alert modes: Audible, Beep & Vibe, Vibrate Only, and No Message Alert (Silent)

- (1) From the Standby screen press the Red button.
- (2) Press the Up or Down Arrow button until "Choose Alert" is displayed on the screen.
- (3) Press the Red button.
- (4) Press the Up or Down Arrow button to select the alert mode you would like.
- (5) Press the Red button to set.

2.5 Setting the Audible Alert type

There are ten different audible alert choices.

- (1) From the Standby screen press the Red button.
- (2) Press the Up or Down Arrow button until "Choose Alert" is displayed on the screen.
- (3) Press the Red button to select.
- (4) Press the Up or Down Arrow button to scroll through the alert types. A description is displayed on the screen and a sample is played.
- (5) Press the Red button to set.

2.6 Stopwatch

- (1) From the Standby screen press the Red button.
- (2) Press the Up or Down Arrow button until "Stopwatch" is displayed on the screen.
- (3) Press the Red button to select.
- (4) Press the Up Arrow button to start, pause, and restart. Press the Down Arrow button to reset.
- (5) Press the Red button to exit the Stopwatch.

2.7 Private Time

This feature allows you to set a daily time period in which the message alert is silent, but the pager still receives.

- (1) From the Standby screen press the Red button.
 - (2) Press the Up or Down Arrow button until "Private Time" is displayed on the screen.
 - (3) Press the Red button to select.
 - (4) Press the Red button to enable or disable Private Time.
- = Disabled ● = Enabled
- (5) Set the ON time and the OFF time using the Up/Down buttons to move the cursor and the Red button to increase the number value.
 - (6) Press the Green button when finished.

Note: The ON time is when the Private Time starts and the OFF time is when the pager returns to normal operation.

2.8 Setting the LCD Display Mode (Wrist Watch Mode)

The "Normal" display mode turns the display off after several seconds of idle time to conserve power and extend the battery life. The LCD will automatically turn on when a page is received or when any button is pressed. You may prefer to have the display stay on all the time which keeps the time and date visible (Wrist Watch Mode).

- (1) From the Standby screen press the Red button.
- (2) Use the Up/Down buttons to select "LCD ALWAYS ON MODE".
- (3) Press the Red button to select this mode.
- (4) To return to the normal mode, follow the same instructions and press the Red button when "LCD NORMAL MODE" is displayed.

Note: This feature is optional and may not be accessible on all pagers.

3. Receiving and Reading Messages

3.1 Receiving Messages

Your pager will store up to 19 personal messages. When a message is received, the pager will alert based on the alert mode you have set, and the message will be displayed on the screen. Press any button to stop the alert. The Standby screen displays ▲▲▲ a row of triangles, each one representing an individual message. A solid triangle indicates a message that has been read, a flashing triangle indicates an unread message. The pager will alert you every few minutes if there are any unread messages. Read these messages to stop the alert.

Note: Unread message alert is optional and may not be present on all pagers.

3.2 Mail Drops

If your pager is programmed to receive news, weather and sports feeds (mail drops), a second row of icons will be displayed below the personal messages indicators.

3.3 Reading Stored Messages

- (1) From the Standby screen, press the Up or Down Arrow button to select the message you want to read.
- (2) Press the Green button to read the message.
- (3) While reading a message you can press the Up or Down Arrow button to read the next or previous message.
- (4) If an individual message exceeds the space on the screen, press the Green button to view the next page.

3.4 Locking / Unlocking Messages

Up to 16 messages can be locked to prevent accidental erasure. When a message is locked the standard ▲ is replaced by the lock symbol.

- (1) While displaying a message press the Red button. (You can also use the Up/Down buttons to select a message location from the Standby screen and press the Red button).
- (2) Use the Up/Down buttons to select Lock Message (or Unlock Message if that message was previously locked). Press the Red button.

3.5 Deleting an Individual Message

- (1) While displaying a message press the Red button. (You can also use the Up/Down buttons to select a message location from the Standby screen and press the Red button).
- (2) Use the Up/Down buttons until "Delete Message" is displayed.
- (3) Press the Red button.

Note: Only unlocked messages can be deleted.

3.6 Deleting All Messages

- (1) While displaying a message press the Red button.
- (2) Use the Up/Down buttons to select "Delete All Messages".
- (3) Press the Red button. "Delete All Messages?" is displayed.
- (4) Press the Red button to confirm.

Note: Locked and unread messages will not be deleted.

4. Duplicate Message

If the same message is received more than once, DUPLICATE MESSAGE is displayed at the beginning of the new message. The new message replaces the older message and the time stamp reflects the time the new message was received.

5. Low Battery Indicator

When the battery is fully charged, the battery indicator is totally black. As the charge on the battery is reduced through use, the indicator will show less black area. When the charge level is critically low, an audible alert will sound every four minutes.

6. Battery and Recharging Information

Your pager uses an internal Lithium Ion rechargeable battery as its power source. Recharge the pager's battery using only the supplied AC charging station or connect the supplied cord to any computer's USB socket. A blue light on the face of the pager indicates the battery is charging. A full charge is reached in approximately 12 hours. The blue light will turn off when the battery is fully charged.

7. Warranty

Your pager is guaranteed to be free from defects at the time of sale. Contact your paging service provider or seller for the terms of your warranty. Please note that physical or moisture damage is not covered under your warranty.